



- GB** Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
- DE** Elektrische Altgeräte dürfen nicht mit den Haushaltsabfällen entsorgt werden. Bitte recyceln Sie dort, wo entsprechende Einrichtungen vorhanden sind. Fragen Sie bei Ihrer örtlichen Behörde oder Ihrem Händler bzgl. Recycling um Rat.
- FR** Les appareils électriques ne doivent pas être jetés avec les déchets domestiques: pensez à les recycler. Renseignez-vous auprès du revendeur ou de votre commune pour en savoir plus.
- ES** Los productos eléctricos de desecho no deben eliminarse junto con la basura doméstica. Por favor, recicle este producto si existen instalaciones para ello. Consulte con la autoridad local o el distribuidor para que le asesore acerca del reciclaje del producto.
- IT** I rifiuti elettrici non dovrebbero essere eliminati insieme ai normali rifiuti casalinghi. Riciclate quando possibile. Contattate le Autorità Locali o il rivenditore per informazioni riguardanti il riciclo.
- PL** Zużytego sprzętu elektrycznego i elektronicznego nie należy wyrzucać wraz z odpadami komunalnymi. Dlatego zużyty sprzęt należy przekazać do punktu zbierania zużytego sprzętu. W celu uzyskania dalszych informacji należy zwrócić się do władz lokalnych lub sprzedawcy detalicznego.
- PT** Os produtos eléctricos em fim de vida não devem ser eliminados no lixo doméstico. Por favor, recicle nos locais onde existem instalações para isso. Consulte as suas Autoridades Locais ou o revendedor para obter aconselhamento de reciclagem.
- NL** Elektronische producten mogen niet weggegooid worden bij huishoudelijk afval. Recycle indien hiervoor faciliteiten aanwezig zijn. Raadpleeg uw plaatselijke autoriteit of winkel voor meer informatie over recycling.
- GR** Μη απορρίψτε τις άχρηστες ηλεκτρικές συσκευές μαζί με τα οικιακά απορρίμματα. Ανακυκλώστε τις στις κατάλληλες εγκαταστάσεις. Ρωτήστε τις τοπικές αρχές ή τα τοπικά καταστήματα ηλεκτρικών ειδών για την ανακύκλωση ηλεκτρικών συσκευών.
- RU** Электрическое оборудование нельзя выбрасывать вместе с обычным бытовым мусором. Если имеется такая возможность, пожалуйста, сдавайте устройство для вторичной переработки. Рекомендации по утилизации устройства можно получить у продавца или в местных органах власти.



- GB** off-my-nuts squirrel spinner instructions
- DE** Anweisungen für die eichhörnchensichere Vogelhausrotationsvorrichtung
- FR** Instructions d'utilisation de l'anti-écureuils pivotant
- ES** Instrucciones del husillo suelta las nueces para ardillas
- IT** Istruzioni del sistema rotante scaccia scoiattoli
- PL** Odstraszacz wiewiórek Instrukcja
- PT** Instruções do dispositivo giratório para esquilos off-my-nuts
- NL** Off-my-nuts squirrel spinner instructies
- GR** Οδηγίες για την περιστρεφόμενη διάταξη Off-my-nuts
- RU** Инструкция Беличьей вертушки Off-my-nuts



STV 680

STV International Ltd.
Forge House, Little Cressingham, Thetford, IP25 6ND. United Kingdom.
www.stvpestcontrol.com Tel: +44(0)1953 881580

30/10/17

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

GB

Remove all packaging materials and check that the unit is not damaged before use. Decide on an appropriate location for your product (see siting instructions overleaf).

TIPS FOR INSTALLATION

1. Insert 3 x C size, LR14 Alkaline 1.5v batteries (not included) into the 3 compartments on the underneath of the unit. DO NOT SWITCH THE UNIT ON.
2. To relocate the unit, change the batteries, or refill the feeder, *the unit must always be switched to OFF.
3. Use the hang hook and tie provided to suspend unit in appropriate location — see SIGHTING INSTRUCTIONS.
4. Fill bird feeder and hang from the hang hook at the base of unit.
5. Turn on the unit. The LED light will flash for 10 seconds during which time the unit remains inactive:
GREEN FLASH:battery power good and unit will activate
RED FLASH:battery power low and should be replaced
6. After flashing green the unit is primed. The LED will continue to flash every 5 seconds indicating that it is on standby.
7. On activation the unit will spin the birdfeeder for 10 seconds. Dependent on whether the unit is tilted or not, the LED will flash either green, or red-green during activation.
8. The unit will then stop for 5 seconds. This prevents self-activation caused by movement of the birdfeeder. If the squirrel is still present, or visits the feeder again, the unit will re-activate/until deterred.



SIGHTING INSTRUCTIONS

Hang the unit and birdfeeder at least 50cm from tree trunks, fence posts, or other solid objects and be sure that it is well clear of foliage or anything that may snag the feeder as it rotates.

Select a site that is sheltered from wind if possible - the unit will activate if the feeder swings significantly. In very high winds you may need to take it down.

To avoid the risk of injury to squirrels hang unit no more than 1.5m above ground level and over grass as opposed to concrete or hard surfaces.

Ensure the weight of the birdfeeder is distributed evenly so that the unit is not tilted.

Ensure that the hang hook at the top of the unit is fixed, ie firmly attached with the plastic tie provided and not hanging on rope or string.

Squirrels are very persistent. To prevent them lifting the feeder up to remove bird food the gross weight should be 400g or more. Placing a few stones in the bottom of a birdfeeder can help overcome this problem. Additional ties are also provided with which to secure feeders to the bottom hook. Alternatively, hanging a larger birdfeeder can help.

The off-my-nuts squirrel spinner is, in effect, a training device: expect battery usage to be more initially until the squirrels have learned to feed elsewhere.

POWER

Requires 3 x C size LR14 Alkaline Batteries (not included)

WARNINGS

- Keep batteries away from children and pets
- Do not leave batteries in the unit when not in use
- Do not mix used and new batteries
- Do not mix standard or rechargeable batteries
- Never dispose of batteries in a fire
- Used batteries should be disposed of in household waste. Check with your local authority for appropriate recycling points